


Installation Instructions

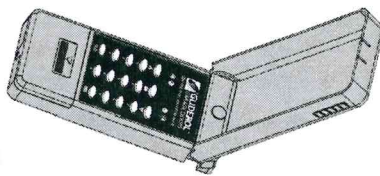

3. Code Setting to Controller

Once the key configuration is set, you can now program in the security code from your keypad.


- On the control box, press the LEARN code key once
- Learn LED indicator will light
- Enter your PIN, then press
- Press the door operation key that will operate the door, e.g. for A, single door installation, you would press
- Learn LED will go out
- The wireless keypad is now programmed to the control box

NOTE: To program more than one wireless keypad to the control box, repeat the above instructions.

IMPORTANT: If a wireless keypad is lost or stolen, please refer to control box instruction manual for procedures to erase the code memory.


Box Contents

Digital Wireless Keypad


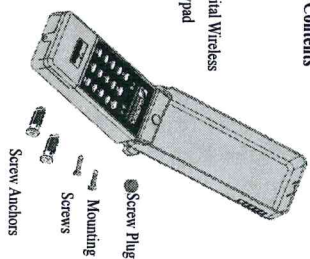


For Convenience, program Keypad BEFORE mounting.

To begin use, firstly remove insulation from battery compartment. Please refer to 6. Changing Batteries instructions.

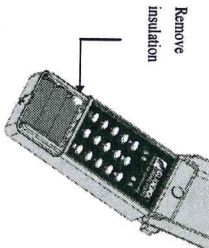

4. Mounting Instructions

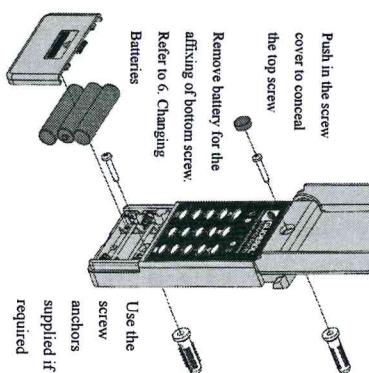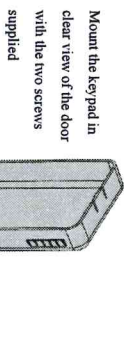

1. Setting Your Wireless Keypad Master PIN

NOTE: The Master PIN MUST be reset to begin use.

A. Activate programming mode:

- Press the factory preset default PIN
1 2 3 4
- While in PROG mode, both & are on
- Press 0 1
- Beep to signal Master PIN selected, & flashing for PIN input
- Enter your New PIN (4 to 8 digits), then press
- Re-Enter your New PIN to confirm, then press again
- Two beeps to signal Master PIN has now been successfully changed
- Keypad will automatically exit PROG mode after 20 seconds

IMPORTANT: Please write down your designated PIN below and keep this instruction manual in a secure place for future reference.


If Master PIN is lost and unrecoverable, the keypad is required to be return to factory and a reset fee is applicable.

5. Keypad Operation

- Enter the keypad PIN
4-8 digit PIN
- LED is on if PIN correct
- Press the designated keypad operation key
- LED will remain on for 20 seconds for consecutive door operations, without re-entering the PIN.


6. Changing Batteries

- Remove the battery cover by sliding downwards
- Remove the low batteries and dispose of it properly
- Install 3 new AAA 1.5V alkaline or lithium batteries, note the +/- polarities indicated in the battery compartment
- Replace battery cover by sliding upwards

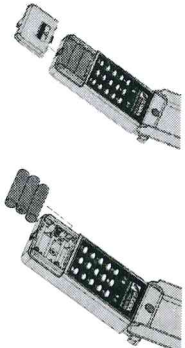

2. Keypad Door Operation Key Setting

 
A. Programming Single Door Installation



The above jumper configuration will allow the keypad to be coded.

NOTE: The jumpers are located on the Control Box Printed Circuit Board. Please refer to the control box instruction manual.

 B. Programming Single Door Installation



This above configuration uses all three keys.



 
7 Optional Secondary PIN Operations

The GLIDEROL Digital Wireless keypad allows for up to 10 individual PIN's to be programmed (CODE 01-10), which can be used for different family members or to act as a temporary PIN for house-sitters, visitors or service people. Below is instruction to set a secondary PIN for CODE 06 (Replace 06 with other CODE numbers 02-10 as required).

NOTE: CODE 01 is the MASTER PIN

- Enter MASTER PIN (4 to 8 digits), then press to enter PROG Mode
- Press 0 5 to select Code 06
- & flashing for PIN input
- Enter your PIN for Code 06 (4 to 8 digits), then press
- Two beeps to signal Code 06 PIN has now been successfully set
- Keypad will automatically exit PROG mode after 20 seconds

C. Two or Three Door Installations



Door 1 - C/Box1
Jumper configuration for
Door 2 - C/Box2
Jumper configuration for
Door 3 - C/Box3
Jumper configuration for

8 Erasing a Secondary PIN

Below is instruction to erase a secondary PIN for Code 06 (Replace 06 with other Code numbers 02-10 as required).

NOTE: Code 01 is the MASTER PIN and cannot be erased

- Enter MASTER PIN (4 to 8 digits), then press to enter PROG Mode
- Press 0 5 to select Code 06
- & flashing for PIN input
- Press to erase
- Two beeps to confirm Code 06 PIN has now been successfully erased
- Keypad will automatically exit PROG mode after 20 seconds